



LEHEHE-700AC COFFEE GRINDER OPERATING INSTRUCTION



Guangzhou Dazheng Group Co., Ltd

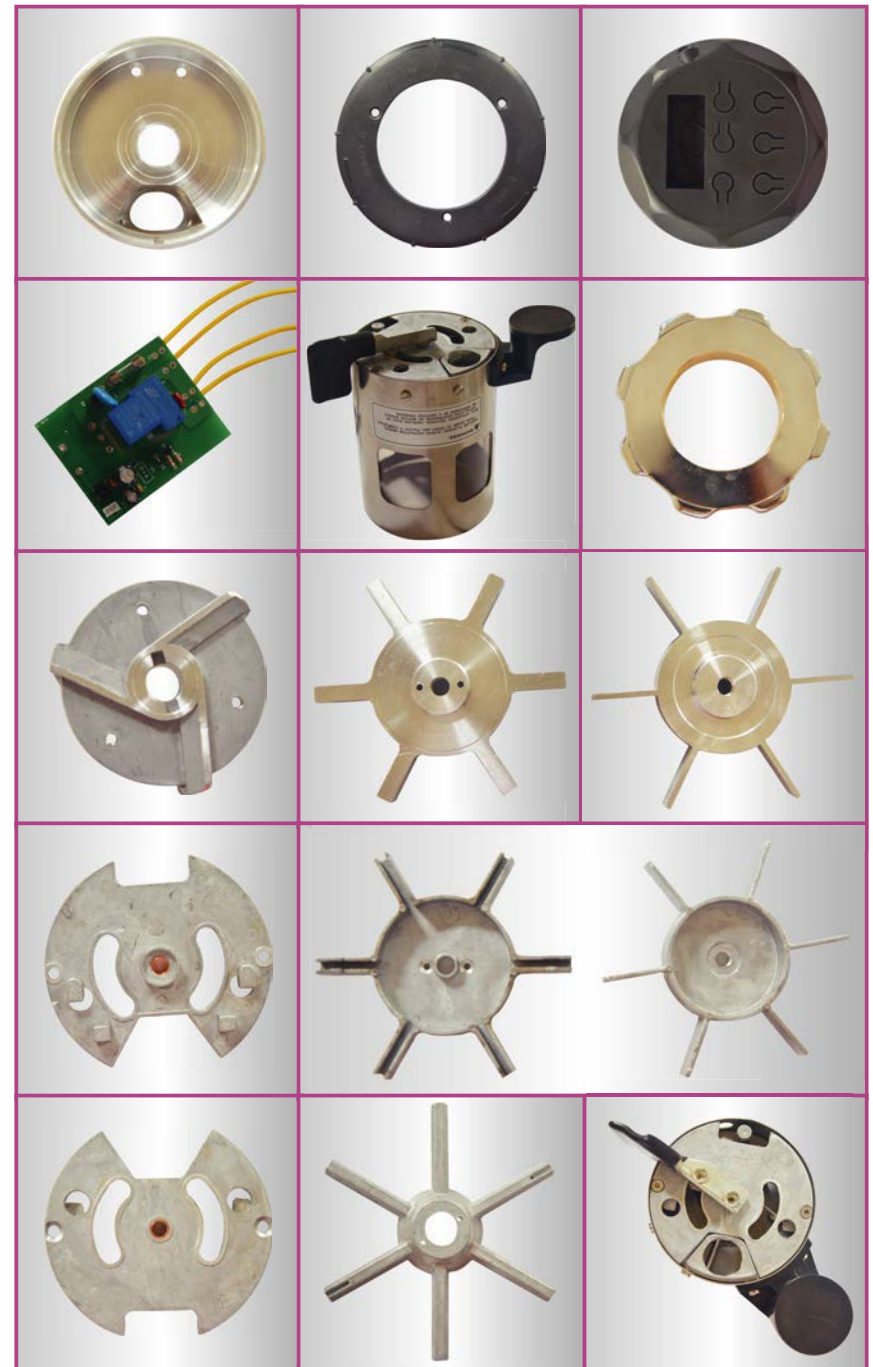
Add: Rm 201, Blk 3, Xiaojiao Complex Bldg, Yingbin Rd, Panyu Dist, Guangzhou, China

Email: info@officez.com

Web: www.officez.com

Contents

The Parameters of LHH-700AC Coffee Grinder.....	1
Cautions.....	1
The Description and Characteristic of Each Parts	2
The Instruction of LHH-700AC Coffee Grinder.....	3
Adjusting Coffee Grind.....	5
Cleaning and Maintenance.....	6
Workshop View	7
Parts Details.....	8-9



Parts details



The parameters of LHH-700AC coffee grinder

Product Model	LHH-700AC	
Dimensions	L331*W217*H586mm	
Net Weight	11kg	
Diameter of Burrs	64mm	
Product Power	350W	
Voltage/Frequency	110-240V/50-60Hz	
Hopper Capacity	1.2kg	

Cautions

We carefully considered about the safety of this production when we began to design and manufacture. But the user should be in accordance with the norms when you use the production. The terms below are necessary safety measures.

1. Please read the instruction carefully and conserve it.
2. The adaptable voltage is 110-240V/50-60Hz.
3. Don't take the grinding parts into water or any other liquid.
4. This production is not light, please put it on the flat table and stay far from the edge of the table.
5. If there's child near the product in use, please carefully look after him/her.
6. Don't put the mill knife into water or other liquid to wash.
7. Don't use this product for any other purpose except grinding the coffee beans.
8. Don't push your fingers into coffee powder outlet or hopper before the power line is discharged.
9. Please adjust the grinder dial while the motor is running, otherwise it will cause the motor locked.
10. Before use the product, you need check the surface of power line in case damaged. Do remember turn off the powder after using the product.

The description and characteristic of each parts



- (1) Bean Hopper Lid
- (2) Bean Hopper: high-volume of 1.2kg and clear hopper , it is easy to see the amount of coffee beans, and easy to control the state of grinding.
- (3) Bean Hopper Door: slidable pull-out structure, which makes the coffee beans drip easily.
- (4) Grinder Dial: to freely adjust the degree of thickness of the coffee beans.
- (5) Adjustment Column: you need to press it on when you want to adjust the degree of thickness.
- (6) Control Panel: users can freely select grinding mode.
- (7) Funnel: with high-quality food grade teflon sprayed inside, clean and effective; outside is with body-color paint sprayed, elegant and fashionable.
- (8) Espresso Handle Holder: with zinc alloy and electroplated, high-texture and high-strength.
- (9) Body: the whole body with aluminum alloy makes it thick and solid; available multiple-choice colors make the appearance elegant and refined.
- (10) Independent Switch of Motor: it can control the motivation of motor independently.
- (11) Power Switch: ON/OFF
- (12) Current Overload Protector: to protect the whole machine, please press it to reset the product if there' s some error causing the motor no working.
- (13) Tray: easy to disassemble and wash.

Workshop view



Cleaning and maintenance

Before cleaning the machine, you must cut off the power, and wait for the product cooling.

1. Cleaning the body of machine, hopper and powder tray.
 - a. Remove the hopper, if there are coffee beans that have not been grinded completely, you should close the door of hopper.
 - b. You can put the hopper and powder tray into clean water to wash then keep them in the shade.
 - c. The body of the machine can be cleaned by wet cotton.

2. Cleaning the grinding mill.

- a. Loosen the 3 screws on the scale dial, and remove it.
- b. You should use hexagon wrench to remove the locating pin.
- c. Press on the adjustment column, and rotate the grinding plate clockwise(now you can close the scale dial,). When it is taken out, you can use brush to scrub the grinding mill.
- d. Open the dispenser lid, and remove the protection cover at the powder outlet, and then use brush to clean the outlet.
- e. Put back the grinding mill after cleaning; replace the locating pin and scale plate.



The instruction of LHH-700AC coffee grinder machine

1. Put the machine on the flat table, and keep the powder plate under the dispenser.



2. Pour the coffee beans into the hopper, cover the hopper lid, and open the bean hopper door.

Tips: Please keep enough coffee beans in the hopper to keep the consistence of grinding when the machine is working.



There's a protection cover in the hopper, it can prevent damages from the knife when user stretch his/her fingers into the hopper room.










 


 

 
Pull

3. Connect power and turn on the switch.

Tips: JX-700AC combines automatic operation and manual operation, which allows users can use it in different modes. The operating instruction is as below.


The Operating Instruction of Control Panel :



Working mode	
 One-cup mode (the first digit is 1)	The display number is  105.0(default is 105.0, which indicates the grinding time is 5s), meaning the product is in one-cup mode. If you press the button, the motor will begin to work, and when the time is countdown to 100.0, the motor will stop.
 Two-cup mode (the first digit is 2)	The display number is  210.0(default is 210.0, which indicates the grinding time is 10s), meaning the product is in two-cup mode. If you press the button, the motor will begin to work, and when the time is countdown to 200.0, the motor will stop.
 Custom mode (the first digit is 3)	The display number is  300.0 (default is 300.0), meaning the product is in custom-mode. If you press the button, the motor will begin to work, and the display time increase from 300 to 999.9. Once the user press the button again during the process, the motor will stop.
Setting mode	
The user can freely set the grinding time of one-cup mode or two-cup mode. Press  or  till the 4th digit begin to flash, then the machine is in setting mode state. Press  or  to adjust the grinding time; press one time will increase or decrease 0.1s,if you keep pressing, the time will continue increasing or decreasing. At this time, press  then the motor begins to work, the user can try to grind the beans to identify whether the setting time meets demand.After the user finish setting, press  or  to save the setting.(the display will no longer flash).	

The Instruction to Operate the Manual Switch



Working mode	
When the light of power turns on, the user can use  to control the motor to run/stop(this switch is not affected by control panel)	

4. Put the portafilter on the Espresso handle holder.



Adjusting coffee grind

1. Press on the adjustment column, and rotate the grinding dial.
2. According to the 1-9 scale , adjust the degree of thickness you need.
3. Loosen the adjustment column after you finish to set up the scale generally, and then slightly rotate the grinding dial to make it correct.

